



Replacing the E102 CRT Monitor by the Monitor Unit FSU201

1. Remove the upper and the back cover of the operating station.
2. Disconnect the signal cable from the connector plate (1), and the monitor (2). The cable is no more used. Disconnect the monitor power cable (3). Remove the four screws, that are used to mount the monitor on the chassis (4). Remove the monitor from the chassis.

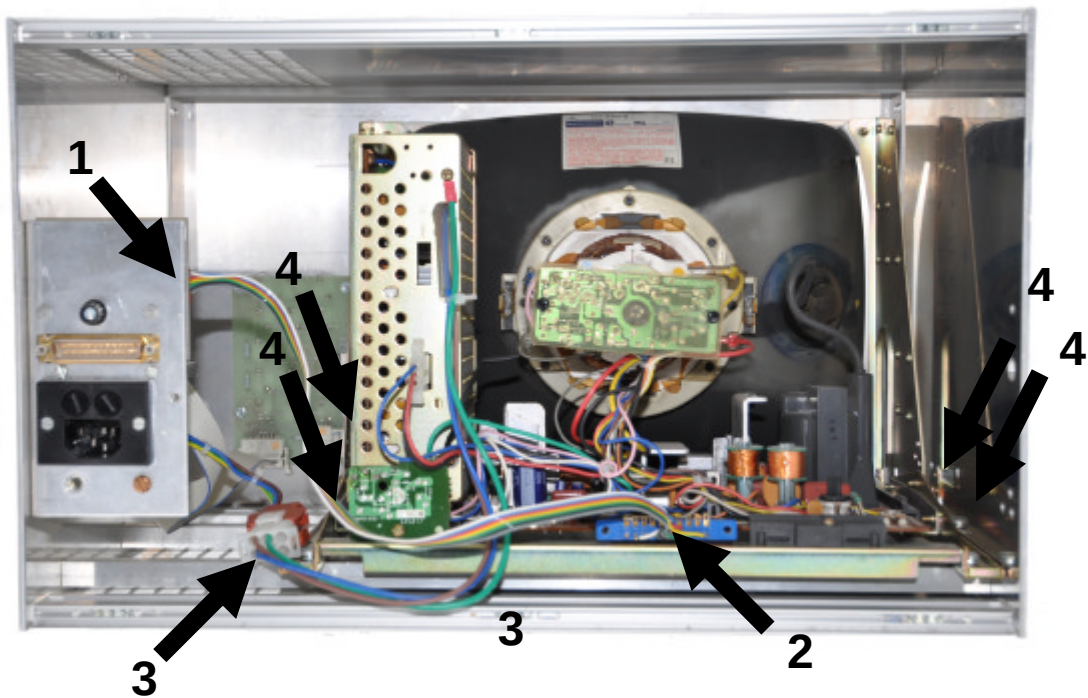

2. Remove the four mounting brackets (5) that are attached at the screen window. Therefore, unscrew the ten nuts (6) at the back side of the panel front. The mounting brackets are no more used.

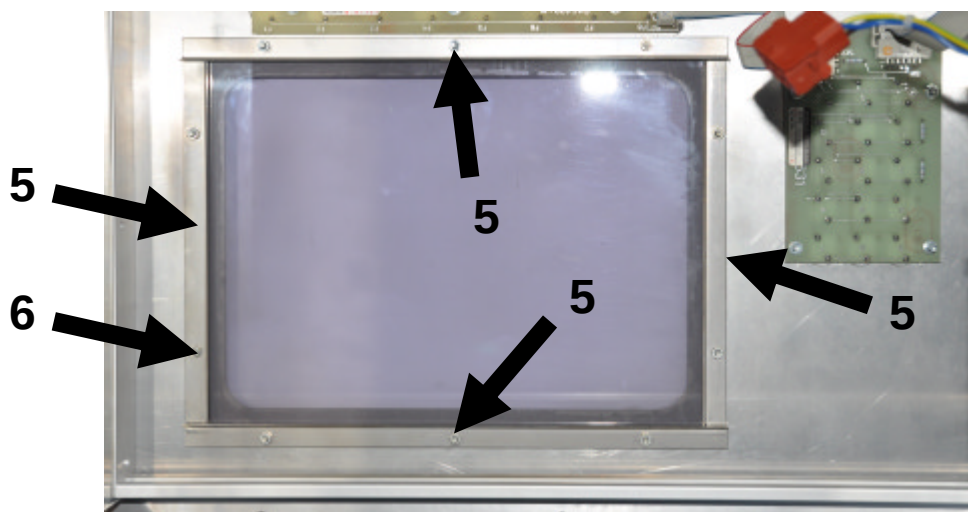

3. Install the Monitor Unit FSU201 and mount it with the four supplied screws at the chassis (7).
4. Plug in Connection Cable 731.426.33 at the FSU201 (8) and the connector plate (9).
5. Connect the FSU201 power cable to the free chassis power connector (10).
6. Remount the upper and the back cover of the operating station.

